

DL14036 - Vivo Auto Foaming Soap Dispenser

Instructions

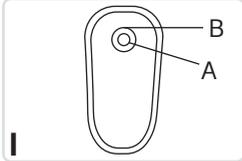


Figure I

- A. Switching machine keys and mode keys
- B. Indicators

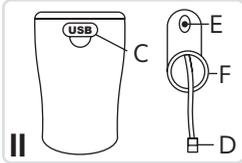


Figure II

- C. USB charge port
- D. Inlet port
- E. Sensor and nozzle
- F. Bottle screw

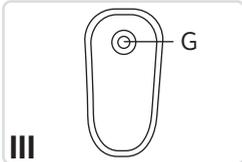


Figure III

- G. Power button

Press the power button. The red light will turn on.

To adjust dispensing volume, short press the blue light for one flash (two-step switching adjustment).

To turn off, long press the purple light until it flashes three times.

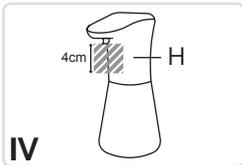


Figure IV

- H. Sensor area (approximately 4cm)

Move hand downwards once foam begins dispensing. The foam will not stick to the black induction zone (shaded area on Figure III).



Figure V

- I. USB charging port

Unplug the USB port cover. Insert the USB charging cable. The red light will light up when charging. A blue light displays when fully charged. Low battery is indicated by the red light.

Note:

1. The charging port must be covered when not in use to prevent water ingress. Water damage is not covered by the warranty.
2. The power is automatically turned off when charging. Reboot after a full charge.

3. Mix soap and water at a ratio of 1:4. Adjust the ratio as necessary.
4. If using hand sanitiser, dilute with water at a ratio of 1:4. Adjust the ratio as necessary.

Product Specifications

Product Name	Vivo Auto Foaming Soap Dispenser
Model No.	DTM-005
Main Material	ABS, PE
Rated Voltage	5V
Rated Power	2W
Battery type	Rechargeable lithium battery
Waterproof rating	IPX4

Precautions

1. This product is not waterproof and cannot be washed with water. Wipe with a warm towel to clean.
2. Do not tilt or turn the body upside down during use.
3. If the product will not be used for a long time, empty the dispenser of liquid.

Maintenance

To prevent the dispenser becoming clogged from solidification of hand sanitiser:

1. Empty all liquid from the dispenser if it will remain unused for 2-3 months or longer.
2. Pour warm water into the dispenser. Drain the foam from the pipes after turning on. Repeat several times until warm water comes out.

Using the Effervescent Tablets

1. Unscrew and take out the pump head.
2. Fill the bottle with 350ml of water.
3. Put the concentrated effervescent tablet into the bottle.
4. Replace the pump head by screwing back into place.
5. The dispenser is ready for use once the tablet has fully dissolved.